



(1) **EC-TYPE-EXAMINATION CERTIFICATE**
(Translation)

(2) Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres - **Directive 94/9/EC**

(3) EC-type-examination Certificate Number:

PTB 99 ATEX 2219 X



(4) Equipment: Slot-type initiators types SJ... and SC...

(5) Manufacturer: Pepperl + Fuchs GmbH

(6) Address: D-68307 Mannheim

(7) This equipment and any acceptable variation thereto are specified in the schedule to this certificate and the documents therein referred to.

(8) The Physikalisch-Technische Bundesanstalt, notified body No. 0102 in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive.

The examination and test results are recorded in the confidential report PTB Ex 99-29175.

(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
EN 50014:1997 **EN 50020:1994**

(10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.

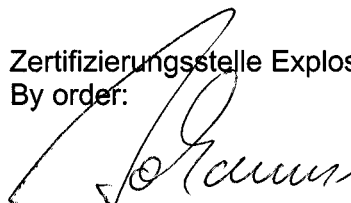
(11) This EC-type-examination Certificate relates only to the design and construction of the specified equipment in accordance with Directive 94/9/EC. Further requirements of this Directive apply to the manufacture and supply of this equipment.

(12) The marking of the equipment shall include the following:

 **II 2 G EEx ia IIC T6**

Zertifizierungsstelle Explosionsschutz
By order:

Braunschweig, December 22, 1999


Dr.-Ing. U. Johannsmeyer
Regierungsdirektor



(13)

SCHEDULE

(14)

EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(15) Description of equipment

The slot-type initiators of types SJ... and SC... are used to convert displacements into electrical signals.

The slot-type initiators may be operated with intrinsically safe circuits certified for categories and explosion groups [EEx ia] IIC or IIB resp. [EEx ib] IIC or IIB. The category as well as the explosion group of the intrinsically safe slot-type initiators depends on the connected supplying intrinsically safe circuit.

Electrical data

Evaluation and

supply circuit..... type of protection Intrinsic Safety EEx ia IIC/IIB
 resp. EEx ib IIC/IIB

only for connection to certified intrinsically safe circuits

Maximum values:

type 1	type 2	type 3	type 4
$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$
$I_i = 25 \text{ mA}$	$I_i = 25 \text{ mA}$	$I_i = 52 \text{ mA}$	$I_i = 76 \text{ mA}$
$P_i = 34 \text{ mW}$	$P_i = 64 \text{ mW}$	$P_i = 169 \text{ mW}$	$P_i = 242 \text{ mW}$

The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type initiators are shown in the table:

types	C _i [nF]	L _i [µH]	type 1			type 2			type 3			type 4		
			maximum permissible ambient temperature in °C for application in temperature class											
			T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1
SC2-N0...	150	150	72	87	100	65	80	100	40	55	75	23	38	54
SC3,5-N0-Y...	150	150	72	87	100	65	80	100	40	55	75	23	38	54
SC3,5...-N0...	150	150	73	88	100	66	81	100	45	60	89	30	45	74
SJ1,8-N-Y...	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2,2-N...	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ2-N...	30	100	73	88	100	67	82	100	45	60	78	30	45	57
SJ3,5-...-N...	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ3,5-H...	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5-...-N...	50	250	73	88	100	66	81	100	45	60	89	30	45	74
SJ5-K...	50	550	72	87	100	66	81	100	42	57	82	26	41	63
SJ10-N...	50	1000	72	87	100	66	81	100	42	57	82	26	41	63
SJ15-N...	150	1200	72	87	100	66	81	100	42	57	82	26	41	63
SJ30-N...	150	1250	72	87	100	66	81	100	42	57	82	26	41	63

(16) Test report PTB Ex 99-29175

(17) Special conditions for safe use

1. For the application within a temperature range of -60°C to -20 °C the slot-type initiators of types SJ... and SC... must be protected against damage due to impact by mounting into an additional housing.
2. The connection facilities of the slot-type initiators of types SJ... and SC... shall be installed as such that at least a degree of protection of IP20 according to IEC-publication 60529:1989 is met.
3. The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type initiators is shown in the table given under item (15) of this EC-type-examination certificate..
4. Inadmissible electrostatic charge of the plastic housing of the slot-type initiators of type SJ30-N..., has to be avoided (warning label on the device).

(18) Essential health and safety requirements

Met by the standards mentioned above

Zertifizierungsstelle Explosionsschutz
By order:

Dr.-Ing. U. Johannsmeyer
Regierungsdirektor



Braunschweig, August 10, 1999

sheet 3/3

EC-type-examination Certificates without signature and official stamp shall not be valid. The certificates may be circulated only without alteration. Extracts or alterations are subject to approval by the Physikalisch-Technische Bundesanstalt. In case of dispute, the German text shall prevail.

1. SUPPLEMENT

according to Directive 94/9/EC Annex III.6

to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Equipment: Slot-type initiators, types SJ... and SC...

Marking:  II 2 G EEx ia IIC T6

Manufacturer: Pepperl + Fuchs GmbH

Address: Königsberger Allee 87, 68307 Mannheim, Germany

Description of supplements and modifications

The slot-type initiators of type series SJ... and SC... listed below may in future also be used in hazardous areas where equipment of category-1 is required.

The modifications exclusively concern the „Electrical data“ (change of maximum permissible ambient temperatures for application as category-1 equipment, reduction of the intrinsically safe evaluation and supply circuit to category ia) as well as the marking of the slot-type initiators listed below.

SC2-N0...	SJ5-...-N...
SC3,5-N0-Y...	SJ5-K...
SC3,5-...-N0...	SJ10-N...
SJ2-N...	SJ15-N...
SJ3,5-...-N...	SJ30-N...

For application as category-1 equipment the marking of the slot-type initiators listed above will be in the future:

 II 1 G EEx ia IIC T6

The „Special conditions“ are also valid for application as category-1 equipment without changes.

1. SUPPLEMENT TO EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

Electrical data

Evaluation and supply circuit

type of protection Intrinsic Safety EEx ia IIC/IIB
 only for connection to certified intrinsically safe circuits
 Maximum values:

type 1	type 2	type 3	type 4
$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$	$U_i = 16 \text{ V}$
$I_i = 25 \text{ mA}$	$I_i = 25 \text{ mA}$	$I_i = 52 \text{ mA}$	$I_i = 76 \text{ mA}$
$P_i = 34 \text{ mW}$	$P_i = 64 \text{ mW}$	$P_i = 169 \text{ mW}$	$P_i = 242 \text{ mW}$

The assignment of the type of the connected circuit to the maximum permissible ambient temperature and the temperature class as well as the effective internal reactances for the individual types of slot-type initiators are shown in the following table:

types	C_i [nF]	L_i [μH]	maximum permissible ambient temperature in °C for application in temperature class											
			type 1			type 2			type 3			type 4		
			T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1	T6	T5	T4-T1
SC2-N0...	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5-N0-Y...	150	150	55	67	95	48	60	88	23	35	63	6	18	46
SC3,5...-N0...	150	150	56	68	96	49	61	89	28	40	68	13	25	53
SJ2-N...	30	100	56	68	96	49	61	89	28	40	68	13	25	53
SJ3,5...-N...	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5...-N...	50	250	56	68	96	49	61	89	28	40	68	13	25	53
SJ5-K...	50	550	55	67	95	48	60	88	25	37	65	9	21	49
SJ10-N...	50	1000	55	67	95	48	60	88	25	37	65	9	21	49
SJ15-N...	150	1200	55	67	95	48	60	88	25	37	65	9	21	49
SJ30-N...	150	1250	55	67	95	48	60	88	25	37	65	9	21	49

Test report: PTB Ex 03-23133

Zertifizierungsstelle Explosionschutz
 By order:

Dr.-Ing. U. Johannsmeyer
 Regierungsdirektor



Braunschweig, October 29, 2003

2. SUPPLEMENT

according to Directive 94/9/EC Annex III.6

to EC-TYPE-EXAMINATION CERTIFICATE PTB 99 ATEX 2219 X

(Translation)

Equipment: Slot-type initiators, types SJ... and SC...

Marking: II 1 G EEx ia IIC T6

Manufacturer: Pepperl + Fuchs GmbH

Address: Lilienthalstraße 200, 68307 Mannheim, Germany

Description of supplements and modifications

In the future the slot-type initiators, types SJ... and SC... may also be manufactured and operated according to the test documents listed in the assessment and test report.

The modifications concern the application of alternative casting compounds and materials for the type label as well as a different enclosure material and additional types of LEDs. The manufacturer's address changes as given above. Furthermore, the test specification is adapted to the current state of the standards which causes an alteration of the marking.

The marking will read in future:

II 1 G Ex ia IIC T6 or II 2 G Ex ia IIC T6

The "Special Conditions" and all further specifications of the EC-type examination certificate including the 1st supplement apply without changes also to this 2nd supplement.

Applied standards

EN 60079-0:2006

EN 60079-11:2007

EN 60079-26:2007

Assessment and test report:

PTB Ex 11-20276

Zertifizierungssektor Explosionsschutz
On behalf of PTB:

Braunschweig, November 25, 2011

Dr.-Ing. U. Johannsmeyer
Direktor und Professor



Sheet 1/1

Physikalisch-Technische Bundesanstalt

Braunschweig und Berlin

Zertifizierungsstelle, Zertifizierungssektor Explosionsschutz

Physikalisch-Technische Bundesanstalt, Postfach 33 45, 38023 Braunschweig

Pepperl + Fuchs GmbH
z. H. Herrn Bernhard Wanninger

Lilienthalstraße 200
68307 Mannheim
Deutschland

Ihr Zeichen: Bernhard Wanninger
Ihre Nachricht vom: 16. Oktober 2012
Unser Zeichen: 3.6-4492/12-Gb
Unsere Nachricht vom:

Bearbeitet von: Dipl.-Ing. Mario Graube
Telefondurchwahl: +49 (0) 531-592-3710
Telefaxdurchwahl: +49 (0) 531-592-3605
E-Mail: mario.graube@ptb.de

Datum: 21.12.2012

Normengenerationsänderung nach EN 60079-0:2009 (IEC-Ed. 5) *Change of the standard generation to EN 60079-0:2009 (IEC-Ed. 5)*

Schlitzinitiatoren Typen SJ... und SC...
Slot-type initiators types SJ... and SC...

Bescheinigungsnummer
PTB 99 ATEX 2219 X

Sehr geehrte Damen und Herren,

Dear Sirs,

Ihre Selbsterklärung vom 2012-10-16 auf Übereinstimmung des o.g. Gerätes mit den vorgenannten Normen, entsprechend Ihrer Checkliste 16-0891a, hat die PTB zur Kenntnis genommen und den zugehörigen Prüfungsunterlagen beigefügt.

Your statement of 2012-10-16 concerning the conformity the a.m. equipment with the aforementioned standards, according to your Checklist 16-0891a, was acknowledged by PTB and added to the related test documentation.

Bitte nehmen Sie dieses Schreiben mit in Ihre Zulassungsunterlagen auf und reichen Sie diese Änderung in einer möglichen späteren Ergänzung mit ein.

Please add this letter to your approval documents and include this modification in a possible later supplement.

Mit freundlichen Grüßen / *Best regards*

Im Auftrag / *By order*

Dipl.-Ing. Mario Graube